



Connector 56
Located at the main
hydraulic valve

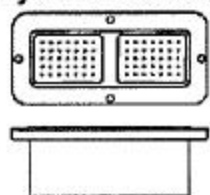

Connector 2
Located right side of cab
behind service door

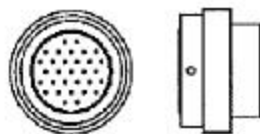

Splice module 73
Located left side below cab
next to main hydraulic valve

